



System information

Copying FST software from FST board to PC-Card

Publisher: NEW Lift Steuerungsbau GmbH

Lochamer Schlag 8
D-82166 Gräfelfing

Tel.: +49 (0) 89/89 866 – 0
Fax: +49 (0) 89/89 866 – 300

Dokument-Nr.: SYST_FSTSW2PCC_EN.doc

Date of issue: 07/06

Copyright © 2006, NEW Lift Steuerungsbau GmbH

All rights including those of copying and reproduction of parts of this document and of the translation are reserved by the publisher.

No part of this document may be reproduced in any form or copied with an electronic replication system without the written permission of the publisher.

Please follow these instructions exactly:

1. Switch the FST to

```
AUXILLIARY MODE
```

by using switch S21.

2. Insert the PC-Card into the top mounted slot on the FST X8.

3. Select

```
MAIN MENU - System - PC-Card Tools - Clear Card = YES
```

to delete old data from PC-Card. After the deletion process has completed the display shows

```
PC-CARD EMPTY!
```

4. Select

```
MAIN MENU - System - PC-Card Tools - S/Ware --> Card
```

to copy the FST software to the PC Card. After transfer process has completed the display shows

```
Config Transfer OK!
```

5. Remove PC-Card again.