


Installation drive pod V2

MANUAL

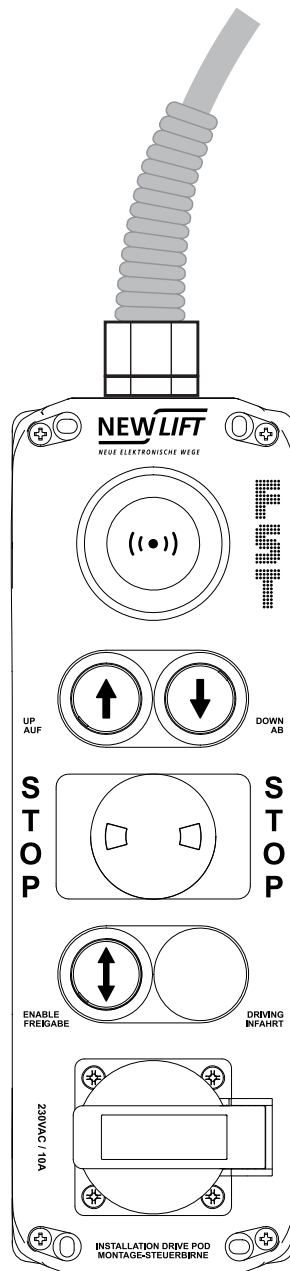

Manufacturer NEW *LIFT* Steuerungsbau GmbH
Lochhamer Schlag 8
82166 Graefelfing

Tel +49 89 – 898 66 – 0
Fax +49 89 – 898 66 – 300
Mail info@newlift.de

www.newlift.de

Service line Tel +49 89 – 898 66 – 110
Mail service@newlift.de

First version 28.11.2013

Author AL / EP

Last change 17.05.2017

Release 17.05.2017 AL

Hardware version 2.6

Software version

Doc. No. hb_msb 2_2017-05_en

Copyright © NEW *LIFT* Steuerungsbau GmbH, 2017.

This manual is protected by copyright. All rights, including those of copying, of reproduction, of translation and of modification, in whole or in part, are reserved by the publisher.

No part of this description may be reproduced in any form or copied with an electronic replication system without written permission.

Although great care has been taken in the production of texts and figures, we cannot be held legally liable for possible mistakes and their consequences.

Content

1	General	4
1.1	Signs and symbols used	4
1.2	Further information	4
1.3	How to contact us	4
1.4	General safety regulations	4
2	Montagesteuerbirne MSB 2	6
2.1	Construction and function	6
2.2	Connecting the MSB 2	6
2.3	Using the MSB 2	7
2.4	Circuit Diagram	8

1 General

The Installation Drive Pod MSB 2 allows the unfinished car platform to be used for installation work, using dead-man drive controls without requiring a trailing cable, a car top-box or an inspection control pod.

1.1 Signs and symbols used

The following signs and symbols are used for operational instructions:

MSB 2

Installation control pod



Safety-relevant information

This symbol is located in front of safety-relevant information.



Information notice

This symbol is located in front of relevant information.

1.2 Further information

The following documents, among others, are available for the FST-2 controller and its components:

- › FST-2 Installation & Commissioning Manual
- › FST-2 manual
- › ADM manual
- › FPM manual
- › SAM manual
- › Fire recall manual

These and other up to date manuals can be found in the download area of our website unter Service
<http://www.newlift.en/service/download>

1.3 How to contact us

If, after referring to this manual, you still require assistance, our service line is there for you:

Tel +49 89 – 898 66 – 110
Mail service@newlift.de

Mon. - Thurs.: 08:00 a.m. – 12:00 p.m. and 1:00 p.m. – 5:00 p.m.
Fr: 08:00 a.m. – 12:00 p.m. and 12:30 p.m. – 3:00 p.m.

1.4 General safety regulations

The Installation Drive Pod must only be operated in perfect working condition in a proper manner, safely and in compliance with the manual, the valid accident prevention regulations and the guidelines of the local power company.

Generally the safety guidelines of the FST-2 manual and the FST-2 Installation and Commissioning manual apply for this product.

General

- › The instructions of the lift manufacturer and the instructions in this manual must be followed during installation and commissioning of the safety device.
- › The shaft must be secured against unauthorised trespassing during installation, commissioning, inspection and maintenance.
- › Assemblies, devices and cables must be installed and fastened securely and permanently.
- › Loads must be moved with suitable aids (lift trucks, hoisting gear etc.).
- › Sharp and pointed tools or other potentially dangerous objects may only be carried along in clothing if suitable protective measures have been taken to rule out any danger.
- › Alcohol and drugs must not be consumed before and during installation and commissioning.

Working in the shaft

- › Any work in the shaft requires perfect and permanent communication between the supervisor on the lift controller and the workers in the shaft.
- › Components in the shaft must be arranged or secured in such a way that persons accessing the shaft for inspection, maintenance or repair purposes are not in danger.
- › The maximum load of the lift system must not be exceeded.
- › The specified overruns of the emergency end switches in relation to the speed must be observed.
- › The emergency installations must not be activated during normal operation.
- › All emergency installations and braking systems must be checked for trouble-free operation and all shaft entrances closed off before beginning work.
- › Installation and operation are prohibited if other persons could be in danger.
- › Workers must be secured against falling.
- › In case of any work interruptions, the car must be moved to the lowest stop position, the control system switched off and the power supply (e.g. UPS) permanently disconnected.

Personal safety equipment of the installing engineer

- › Eye protection
- › Safety boots
- › Protective helmet
- › Safety harness
- › Clothing suitable to the ambient conditions of the installation location
- › Jewellery, watches and similar items may not be worn; a hair net must be used if applicable.

2 Montagesteuerbirne MSB 2

2.1 Construction and function

The Installation Drive Pod MSB 2 is supplied with a 30m long trailing-cable, pre-wired with the FST connectors X2, X14, X18, X19, X31, and X32.

The Installation Drive Pod MSB 2 has the following controls:

- › a red emergency stop button marked “Stop / Nothalt”
- › an audible alarm to warn when the emergency stop button is not activated
- › a white drive button marked “Up / Auf”
- › a black drive button marked “Down / Ab”
- › an blue enable button marked “Enable / Freigabe”
- › a yellow control lamp marked “Driving / In Fahrt”
- › a mains socket rated 10A/230V, IP54

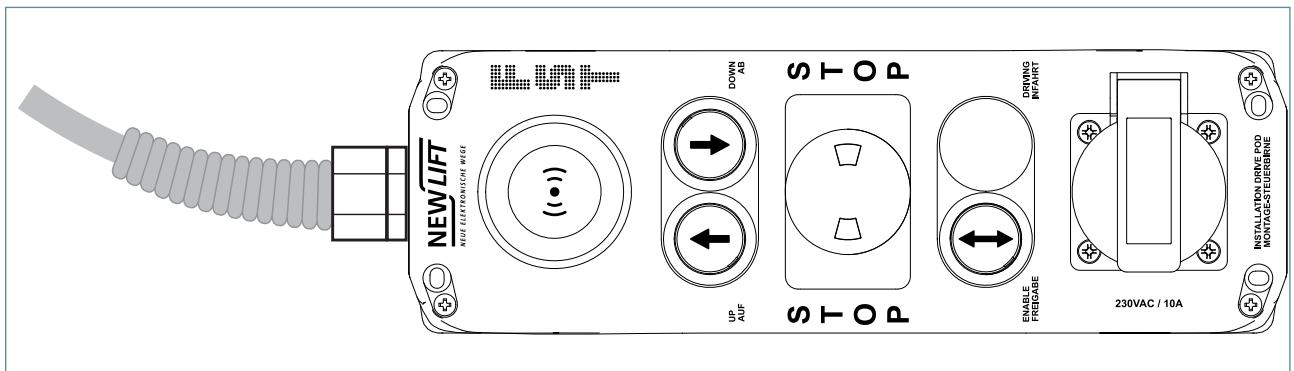


Fig. 3.1: Installation drive pod

The MSB 2 allows the lift engineer to drive a platform lift in dead-man using dead-man controls, without requiring the lift’s trailing-cable, car top-box or inspection control pod. All necessary safety circuit bridges to allow dead-man operation are handled by the MSB 2!

2.2 Connecting the MSB 2

Plug the connectors X2, X14, X18, X19 and X32 from the MSB 2 trailing-cable into the respective sockets on the FST-2 and X31 into the terminal block in the control cabinet, as shown in Fig 3.2.



Ensure that the MSB’s 2 trailing cable is adequately supported with strain relief mountings in the shaft. The trailing-cable must not, under any circumstances, be allowed to become trapped, squashed or damaged by the platform.



Isolate power completely to the installation before making any wiring changes to the Installation Drive Pod MSB 2.

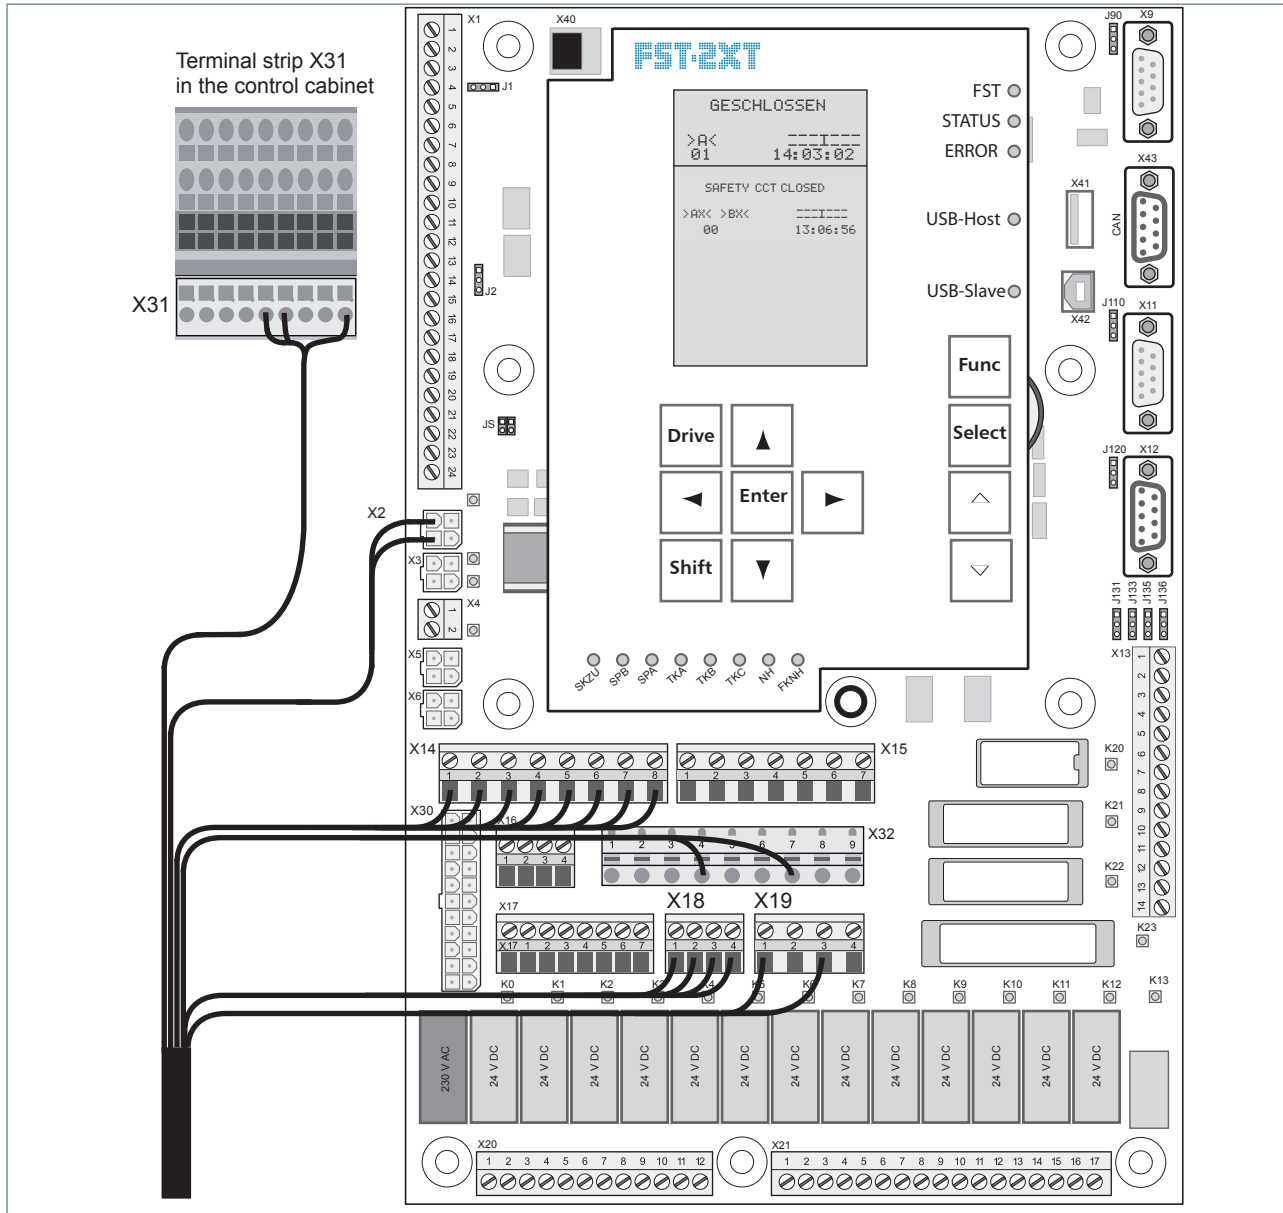


Fig. 3.2: connecting the MSB 2

2.3 Using the MSB 2



The red „Stop / Not-Halt“ emergency stop button opens the safety circuit and must be activated following every drive! The audible alarm will sound when the emergency stop button is not activated!

If the emergency stop button is not activated, the platform is not protected against uncontrolled movement due to an electrical or operating error!

Before beginning every work shift, test the emergency stop button „Stop / Not-Halt“ to ensure faultless operation. The following tests are necessary:

- › After activating the „Stop / Not-Halt“ emergency stop button, “EMERGENCY STOP” should be displayed in FST-2’s LCD Line-A.
- › After activating the „Stop / Not-Halt“ emergency stop button, it should not be possible to drive the platform using the „Up /Auf“ or „Down /Ab“ buttons.
- › Activating the „Stop / Not-Halt“ emergency stop button during a drive, should bring the platform to an immediate stop, without discernible controlled deceleration.
- › When the emergency stop button is not activated, the audible alarm should sound.



If the audible alarm does is not heard, or any other function of the „Stop / Not-Halt“ emergency stop button does not function exactly as described above, the Installation Drive Pod MSB 2 may not be used!



NEW LIFT Steuerungsbau GmbH

Lochhamer Schlag 8
82166 Graefelfing

Tel +49 89 - 898 66 - 0
Fax +49 89 - 898 66 - 300
Mail info@newlift.de

Service line
Tel +49 89 - 898 66 - 110
Mail service@newlift.de

www.newlift.de